

Doors


Door Panel Removal/Installation

NOTE: Take care not to scratch the door panel and other parts.

1. Remove the inner handle. Disconnect the inner handle rod, and disconnect the connectors.

▶: Screw location, 1


▷: Clip locations, 3

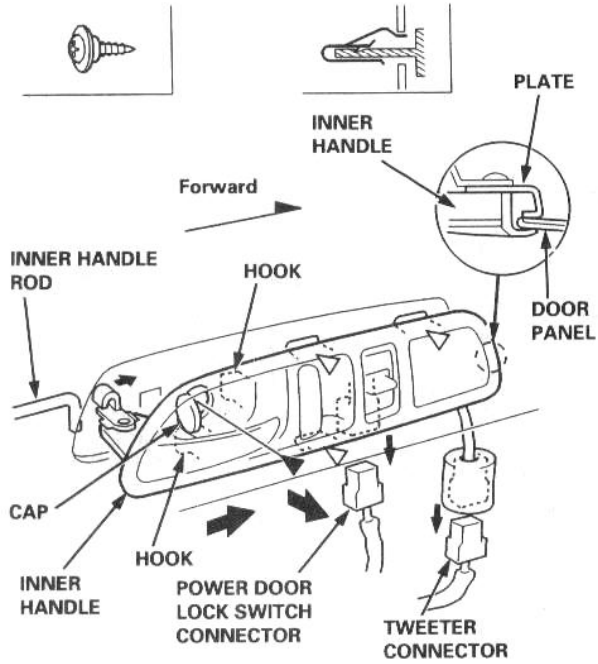

2. Remove the speaker cover, then remove the screws concealed under the cover.

▶: Screw locations, 3


▷: Clip locations, 2

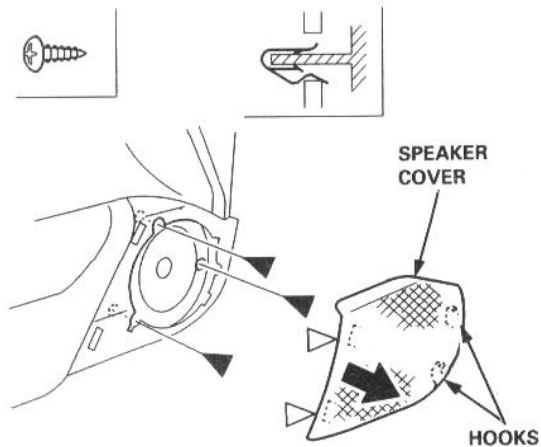

3. Remove the mirror mount cover (see page 20-14).
4. Remove the screw from the armrest pocket. Release the clips that hold the door panel, then remove the door panel by pulling it upward.

NOTE: Remove the door panel with as little bending as possible to avoid creasing or breaking it.

TRIM PAD REMOVER
(Commercially available)
Snap-on #A177, or equivalent


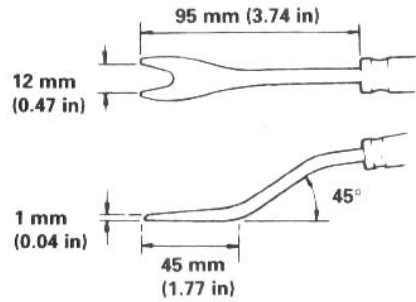


▷: Clip locations

▶: Screw location, 1

A ▷, 1


B ▷, 6

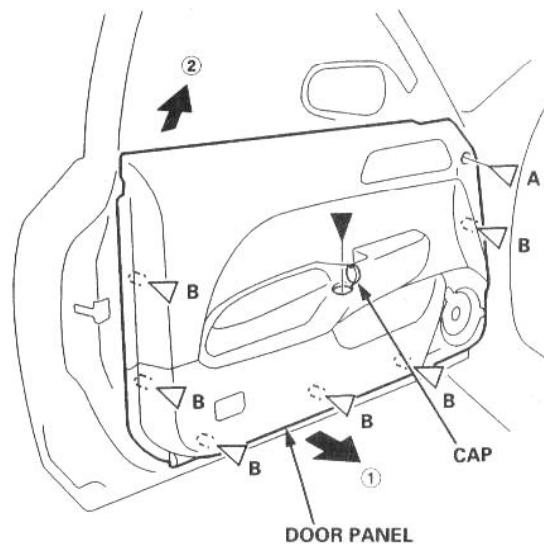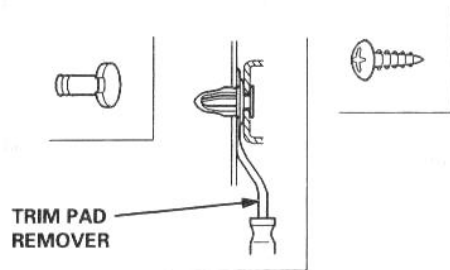



5. Disconnect the connectors.

NOTE: Remove the door panel with as little bending as possible to avoid creasing or breaking it.

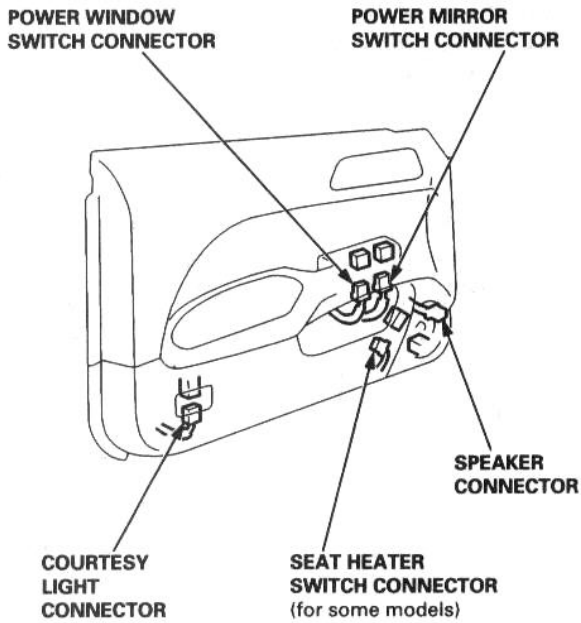

6. Installation is the reverse of the removal procedure.

NOTE: Make sure the connectors are connected properly.



 
Outer Handle and Latch Removal/Installation

NOTE: Raise the glass fully.


1. Remove:
 - Door panel (see page 20-4)
 - Plastic cover (see page 20-2)

2. Remove the rod protector.

►: Screw location, 1

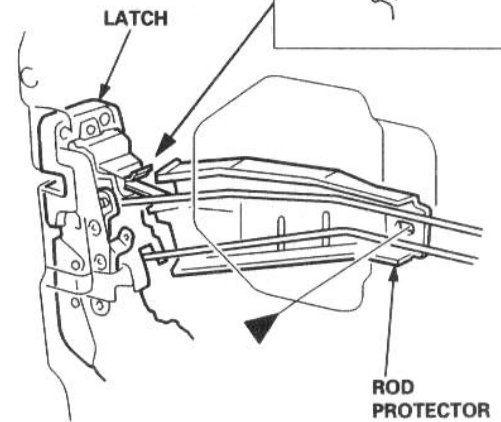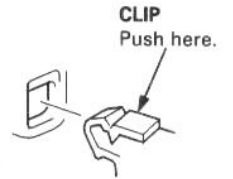

3. Disconnect the cylinder rod, the cylinder switch connector, and detach the harness clips.

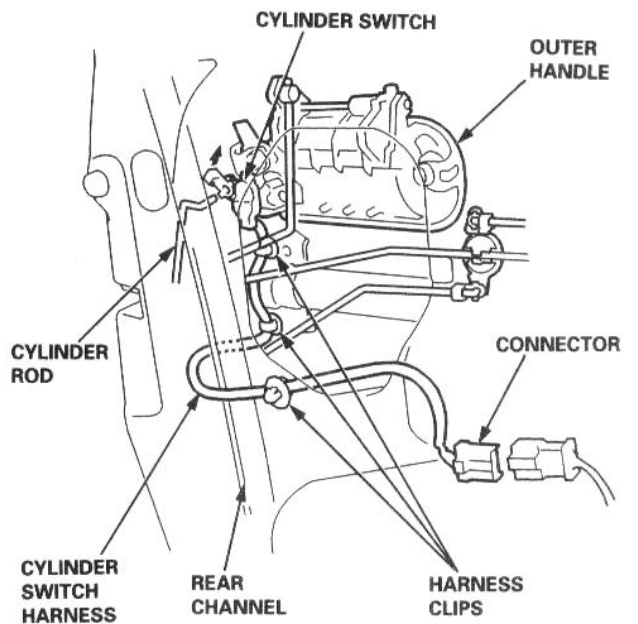

(cont'd)